

total gym[®] ELITE PLUS



Owner's Manual

*For maximum effectiveness and safety,
please read this owner's manual and
view the video before using your
Total Gym[®] Elite Plus.*

Table of Contents

EQUIPMENT WARNING / CAUTION LABELS	3
SAFETY INSTRUCTIONS	3
PRODUCT SPECIFICATIONS	4
SET UP	5-6
ACCESSORIES: HOW TO'S	7-9
AbCrunch Boards	7
Press Up / Pull Up Bars	8
Leg Pull Accessory	9
STARTING OUT	10
INSPECTION, MAINTENANCE & STORAGE.....	11-12
PARTS LIST & OVERVIEW	13-14
WARRANTY	BACK COVER

Congratulations on purchasing your new Total Gym®

With this product in your home, you have everything you need to start your own workout program, to tone and strengthen the important muscle groups of your upper and lower body. This is vital for all of us, regardless of age, sex, or fitness level, and regardless of whether your primary goal is body sculpting, weight loss, health maintenance, or more energy for daily activities.

Strength training not only tones and conditions the muscles we use every day to stand, walk, lift, and turn; it can actually transform our body composition. By reducing body fat and increasing the proportion of lean muscle in our bodies, strength training can effectively turn up our metabolic thermostat, so that we burn calories all the time, no matter what we're doing.

It's easy - all you have to do is spend 15 to 20 minutes a day, 3 to 4 days per week on your Total Gym® to start realizing the benefits.

Be sure to read through this Owner's Manual carefully. **It is the authoritative source of information about your Total Gym®.**

CUSTOMER SERVICE QUESTIONS

If you have questions about your Total Gym®, please call Customer Service at 1-800-303-7896, Monday through Thursday, 8:30 am to 5:00 pm, EST.

ORDERING REPLACEMENT PARTS

When ordering parts, please contact our Parts Department, toll free at 1-800-303-7896, Monday through Thursday, 8:30 am to 5:00 pm, EST.

IMPORTANT: You must have your serial number and this manual ready when calling for parts.

Serial #: _____

PLEASE ALSO PROVIDE THE FOLLOWING INFORMATION:

1. Name, Mailing Address and Telephone Number
2. Date of Purchase
3. Where Product was Purchased (Name of Retail Store, City)
4. Model Number
5. Part Order Number and Description

Equipment Warning / Caution Labels

See page 4 for placement of the following warning/caution labels on your unit.

WARNING LABEL 1

⚠ WARNING

FAILURE TO READ AND FOLLOW THE SAFETY INSTRUCTIONS STATED IN THE OWNER'S MANUAL AND VIDEO MAY RESULT IN POSSIBLE SERIOUS INJURY OR DEATH. KEEP CHILDREN AWAY. MAXIMUM USER WEIGHT 300 LBS. REPLACE THIS LABEL IF DAMAGED, ILLEGIBLE OR REMOVED. FOR HOUSEHOLD USE ONLY; NOT INTENDED FOR COMMERCIAL USE. CALL CUSTOMER SERVICE AT 1-800-303-7896 FOR REPLACEMENT LABEL, MANUAL, VIDEO OR QUESTIONS.

WARNING LABEL 2

⚠ WARNING

MAKE SURE HEIGHT ADJUSTMENT SPRING LOADED PIN IS LOCKED IN PLACE BEFORE BEGINNING EXERCISES.

WARNING LABEL 6

⚠ WARNING

PINCH POINT. KEEP HANDS AWAY FROM THE FENDER.

4 locations

WARNING LABEL 3

⚠ WARNING

BEFORE USING, INSERT SAFETY PIN THROUGH THE HOLE ON THE RIGHT SIDE OF THE HEIGHT ADJUSTMENT SLIDE MECHANISM.

➔

WARNING LABEL 4

⚠ WARNING

CRUSH HAZARD
KEEP HANDS CLEAR
DURING FOLDING.

3 locations

WARNING LABEL 5

⚠ WARNING

BE CAREFUL NOT TO BUMP HEAD WHEN LEG PULL ACCESSORY IS IN PLACE. REMOVE LEG PULL ACCESSORY FROM FRAME WHEN NOT REQUIRED FOR THE SPECIFIC EXERCISE.

Located on Leg Pulley Bracket

CAUTION LABEL 1

⚠ CAUTION

KEEP HAIR, FINGERS, LOOSE CLOTHING, PETS, AND CHILDREN AWAY FROM HINGES AND OTHER MOVING PARTS TO AVOID SERIOUS INJURY. ALSO, BE SURE TO HAVE ALL PINS LOCKED IN PLACE BEFORE GETTING ON YOUR TOTAL GYM® TO AVOID SEVERE INJURY.

CAUTION LABEL 2

⚠ CAUTION

REMOVE ABCRUNCH BOARDS FROM FRAME WHEN NOT REQUIRED FOR THE SPECIFIC EXERCISE.

Located on both AbCrunch Boards

CAUTION LABEL 3

⚠ CAUTION

REMOVE PRESS UP / PULL UP BARS FROM FRAME WHEN NOT REQUIRED FOR THE SPECIFIC EXERCISE.

Located on both Press Up / Pull Up Bars

CAUTION LABEL 4

⚠ CAUTION

REMOVE PILATES TOE BAR FROM FRAME WHEN NOT REQUIRED FOR THE SPECIFIC EXERCISE.

Located on Pilates Toe Bar pole

Safety Instructions

Before beginning this or any exercise program, consult a physician or health professional, who can assist you in planning a program appropriate for your age and physical condition. This is especially important if you are over age 35 or have pre-existing health problems.

Do not overexert yourself. Stop exercising immediately and consult your doctor if you experience pain or tightness in your chest, irregular heart beat, shortness of breath, or if you feel faint, nauseous, or dizzy.

This product is designed for home use only. It is not intended for commercial or institutional use. Use only as instructed.

Do not stand on the product.

The Total Gym® is not intended for use by children. Keep this and all fitness equipment out of the reach of children.

Keep fingers, loose clothing, and hair away from moving parts.

Inspect your exerciser before each use to ensure proper operation. Do not use this equipment unless all moving parts, including cables and pulleys are working properly. See pages 11 & 12 for details on Inspection, Maintenance and Storage.

The exerciser should only be used on a mat or carpeted surface to prevent unexpected movement of the unit.

Use only the accessory items recommended by the manufacturer.


To avoid serious injury, care should be taken at all times when **getting on and off** this or any exercise equipment.

Be sure Safety Hitch C Pin is engaged each time unit is in use.

Product Specifications


LABEL LOCATIONS AND PARTS IDENTIFIER

Total Gym® Elite Plus includes 4 Workout DVDs

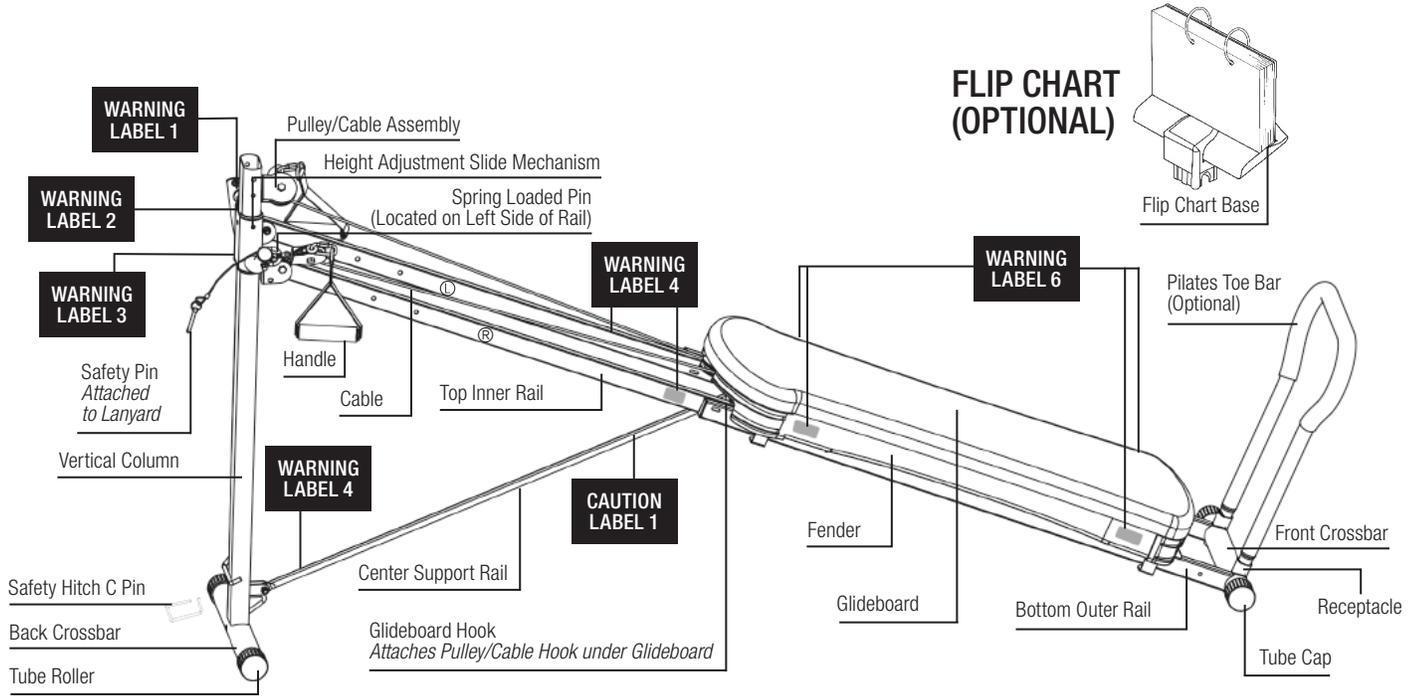


LENGTH	HEIGHT	Width	15.5"
Folded.....	Folded.....	Weight	53.2 lbs.
In Use	In Use	Maximum User Weight	300 lbs.


LEG PULL ACCESSORY / PILATES KIT (OPTIONAL)

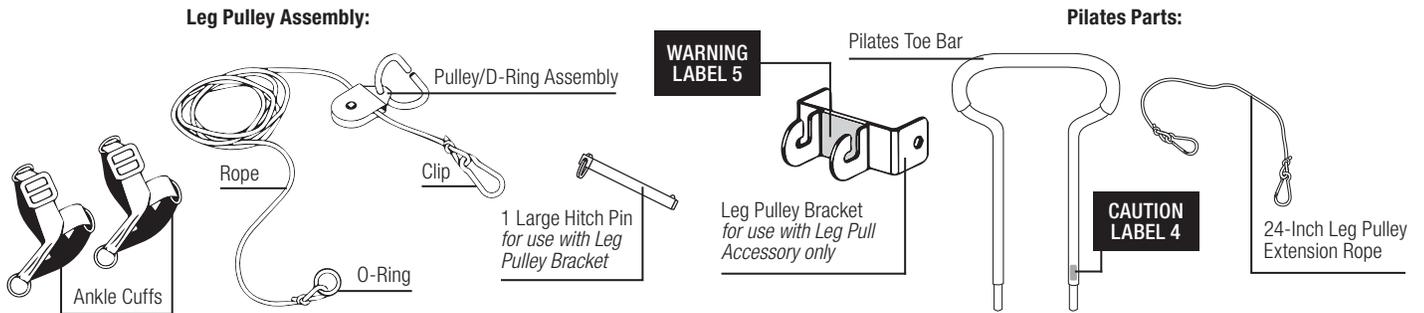


Items shown below are packed in Miscellaneous Accessories

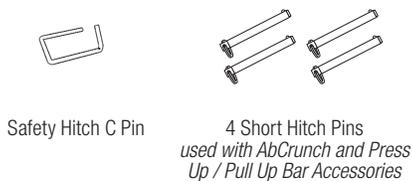

ABCRUNCH (OPTIONAL)

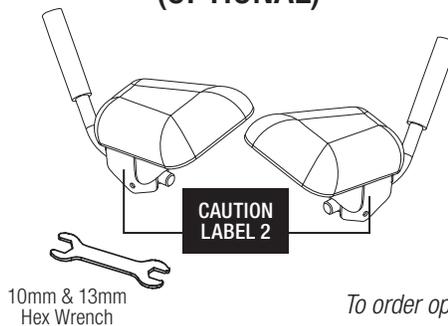

PRESS UP / PULL UP BARS (OPTIONAL)

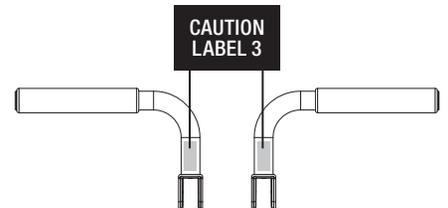

10mm & 13mm Hex Wrench

To order optional accessories, please go to TotalGymDirect.com **4**

Set Up

Your product comes with:



- **Safety Hitch C Pin** to be inserted into side hole located directly below height adjustment assembly on vertical column.
- **Height Adjustment Quick Release Pin** located on side of vertical column for raising and lowering rails.
- **Spring Loaded Pin** locked into the base of the left rail by the height adjustment slide mechanism. Left side is determined by standing behind the unit facing the vertical column.
IMPORTANT: To prevent injury, be sure the spring loaded pin is locked securely into place in the left rail before using unit. This will prevent the vertical column from falling forward.
- **Safety Pin** located on lanyard/attached to height adjustment slide mechanism.
- **4 Short Hitch Pins** for the AbCrunch and Press Up / Pull Up Bars and **1 Large Hitch Pin** for the Leg Pulley Bracket (located in the Miscellaneous Section of the Accessory Kit.)

IMPORTANT: Before using AbCrunch, Press Up / Pull Up Bars and Leg Pull Accessory, be sure the Hitch Pins are securely inserted (see pages 7-9 of this manual for directions).


1. Pull the product out of the shipping box. Remove all packaging materials, including tape and cardboard inserts, from your unit.
NOTE: Some parts are packed inside the Rails.
2. Lay product on the floor with Glideboard side up. Make sure you have plenty of space on both ends of the product. Slide the Glideboard as far as it will go towards the Front Crossbar before you begin lifting unit.
3. Lift the exerciser up by holding it at the top of the Rails. Using your foot, slowly spread the unit open at the bottom approximately 12 inches so that it rests firmly on the Front and Back Crossbars not allowing it to go too far.

4. Make sure the Handles are out to the sides before you begin to unfold your unit. Keep hands and fingers away from Pulley. Hold onto the top center of Glideboard and begin rolling rear Tube Rollers. Spread the unit out until it is flat on the floor. Be careful to do this **slowly**.


Be sure to support the frame in the center to avoid having the product drop suddenly onto the floor or pinch fingers.

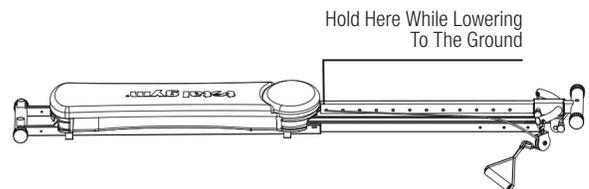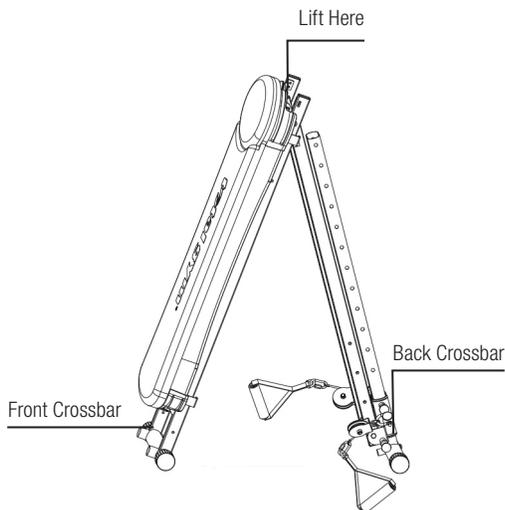

5. **A.** Next remove plastic packing ties from the top and bottom of the Vertical Column. Pull out the Spring Loaded Pin Knob located at the left rail (**NOTE:** pin shown in picture is on right side) to release Spring Loaded Pin. Continue to hold Pin out while performing the next step.

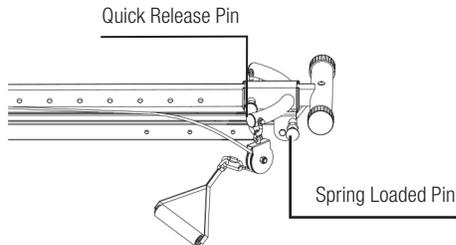


- B.** Take hold of the Vertical Column and pull it up until it is upright. Release the Spring Loaded Pin. You should hear it lock back into place. (**NOTE:** Pin is on left side.)

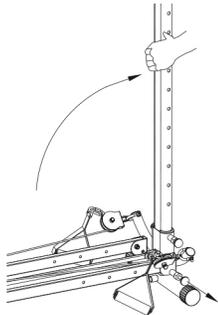

IMPORTANT: Be sure the Spring Loaded Pin is locked into place before using your unit. You will know the Pin is locked into place when you can see the end protrude through the inside of the Rail Bracket.


6. Position one foot on Back Crossbar to keep the product from lifting off the floor. With one hand on either the right or left Rail and the other hand holding the Height Adjustment Quick Release Pin out, slide the Rails along the Vertical Column to desired position and release Pin. Pin will pop into place - you will hear a snap. Last, insert Straight Safety Pin (attached to the Lanyard on the Height Adjustment Slide Mechanism) through the hole on the right side of the Height Adjustment Assembly.

NOTE: Insert Safety Hitch C Pin in the side hole located directly below the Height Adjustment Assembly on the Vertical Column.

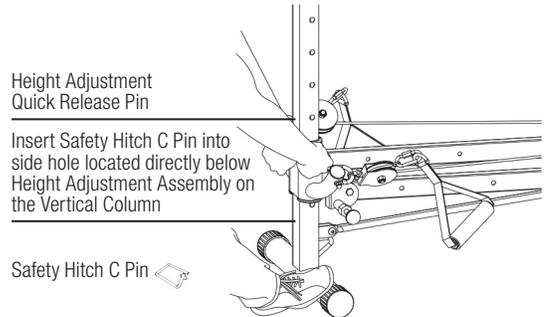


7. PILATES TOE BAR ASSEMBLY

Assemble the Pilates Toe Bar at the opposite end of the unit by inserting the accessory into the Front Crossbar as pictured here. Make sure the accessory is fully inserted.

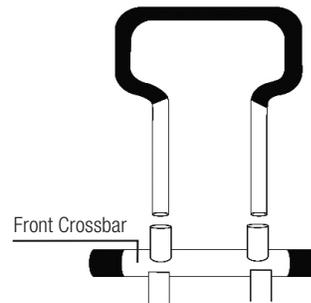

8. FLIP CHART ASSEMBLY

To add the Flip Chart, insert the Flip Chart Base into the Vertical Column. Then secure the Flip Chart onto the Flip Chart Base.

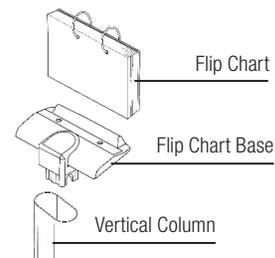


How to Attach the AbCrunch

1. Be sure to give enough clearance so your head does not hit the Vertical Column when performing these exercises. **DO NOT attach the AbCrunch to the Rail on the hole that is closest to the Vertical Column, doing so could result in possible serious injury or death.**
2. Remove Leg Pulley Bracket when using the AbCrunch to avoid contact, which could result in possible serious injury or death.
3. Be sure that the Hitch Pins are securely locked in place before using the AbCrunch. Failure to do so may cause the AbCrunch to fall off resulting in possible serious injury or death.
4. Do not move your body to the extreme left or right when using the AbCrunch to avoid falling off the exerciser which could result in possible serious injury or death.
5. Caution should be used when getting on and off the exerciser when the AbCrunch is in place. Failure to do so could result in possible serious injury or death.

ASSEMBLY


1. Remove Flanged Hex Bolts from bottom of AbCrunch Boards.
2. With the small end of the AbCrunch Board closest to the Handle Grip securely attach the appropriate Handle with 4 Flanged Hex Bolts using Hex Wrench provided.

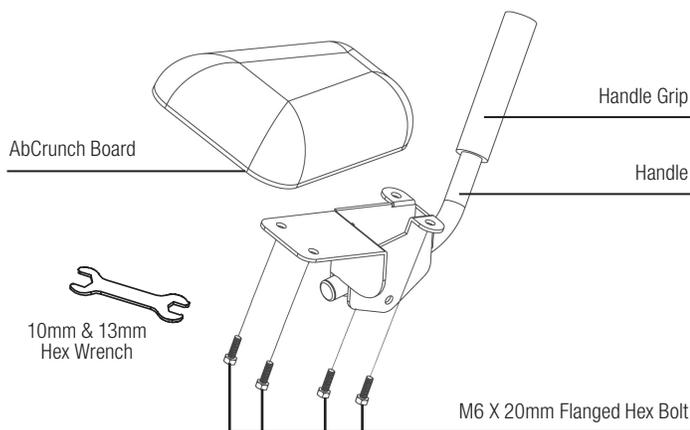

3. Repeat on 2nd AbCrunch Board.


INSTALLATION

1. Locate the 3 holes at the top of the right and left Rails on the Vertical Column. **DO NOT** use hole closest to the Vertical Column. Your head could come in contact with the Vertical Column and could result in possible serious injury or death.

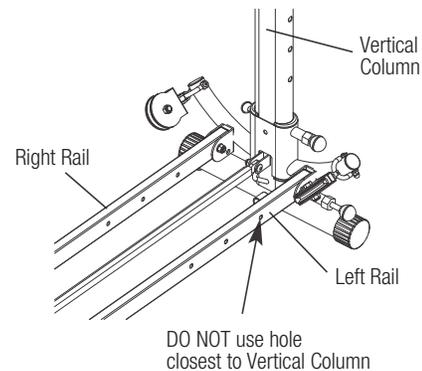

Choose the 2nd or 3rd hole depending on your height or comfort level.

2. Install the AbCrunch labeled (L) onto the left side Rail with the handle facing toward the Vertical Column.

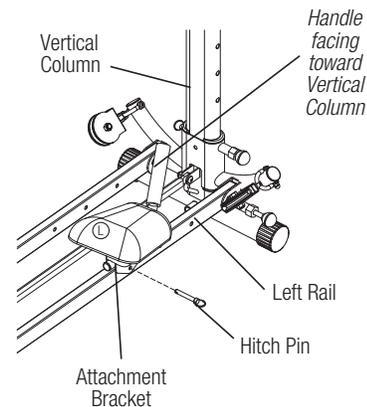


3. Insert the M8 x 60mm Hitch Pin through the holes on the Attachment Bracket and through the hole on the Left Rail as indicated by arrow.
4. Repeat for the AbCrunch labeled (R).


NOTE: Remove AbCrunch when you are not exercising with it.

REMOVE ALL ACCESSORIES WHEN YOU ARE NOT EXERCISING WITH THEM.

How to Attach the Press Up / Pull Up Bars

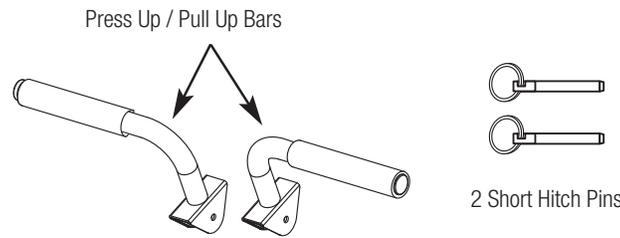


PRESS UPS

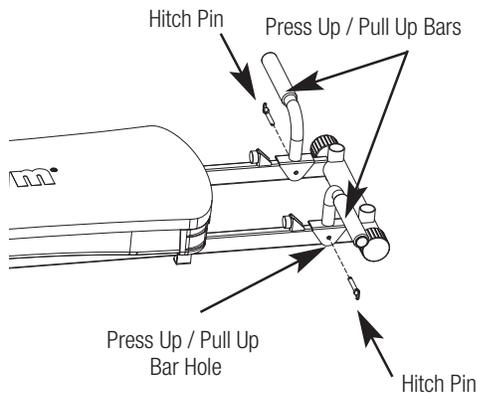

1. Attach each Press Up / Pull Up Bar to the frame with the Short Hitch Pins included with your Total Gym®. **Note: Hitch Pins are included in Miscellaneous Parts.** Simply line up each Bar with the holes at the bottom or front of the frame.
2. Slide one Short Hitch Pin through the hole of one of the Press Up / Pull Up Bars and through the frame. Repeat Steps 1 and 2 for attaching the other Press Up / Pull Up Bar. **Make sure to securely attach each Press Up / Pull Up Bar to each side of the frame before using.** See your *Exercise Guide* for specific exercises.

PULL UPS

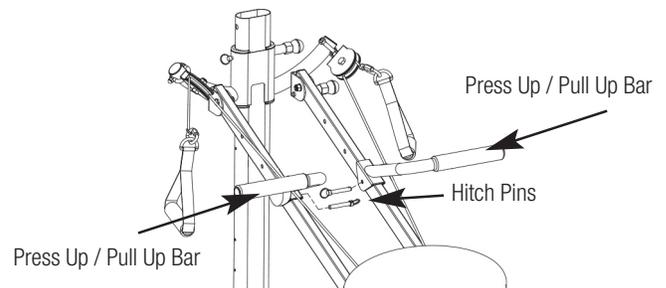


1. Locate the holes at the top of the right and left Rails.
2. Line up the Brackets on the attachments with the desired position holes on the Rails.
3. Insert the 2 Short Hitch Pins through the holes on the Press Up / Pull Up Bar Brackets and the hole on the Rails.
4. You are now ready to perform Pull Up exercises to work the arms, lats and back. See your *Exercise Guide* for specific exercises.

NOTE: Remove the Press Up / Pull Up Bars when you are not exercising with them.


REMOVE ALL ACCESSORIES WHEN YOU ARE NOT EXERCISING WITH THEM.

How to Attach the Leg Pull Accessory

NOTE: Be sure you have plenty of free space around the exerciser so that performing on the Total Gym®, as well as getting on and off, is convenient and safe. Please note, that the Rails cannot be raised to the highest position on the Height Adjustment Column when the Leg Pulley Bracket is attached to the column.

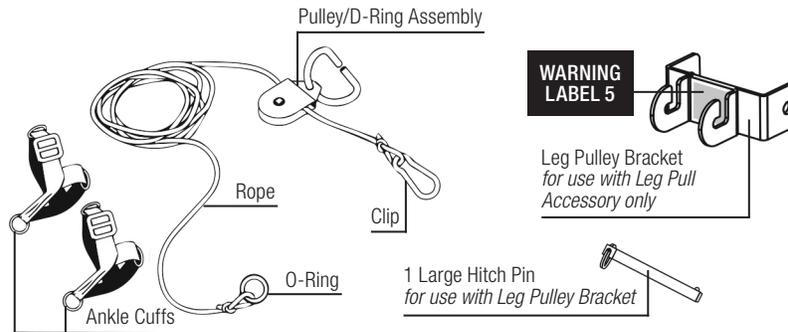


1. Connect the Leg Pulley Bracket to the top of the Vertical Column by aligning Bracket with the hole at the top of the column; be sure Bracket is right side up. Insert Large Hitch Pin through the hole to secure Bracket onto the Vertical Column.

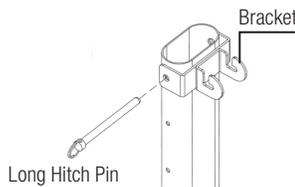


2. Detach the Cable Pulley Assembly from the Hook on the underside of the Glideboard and attach the O-Ring from the Leg Pulley Assembly.
3. Place D-Ring on Pulley first. Then connect the D-Ring to the Bracket as shown.

NOTE: If Rope appears to be twisted, take D-Ring off and turn Pulley around.

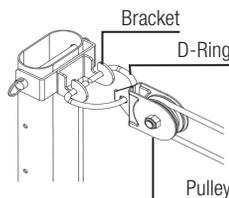


4. Attach the Ankle Cuff to one of your feet by placing your foot in the Ankle Cuff so the O-ring (sewn in) is on the bottom of your foot. Pull tight on the strap at the Harness Buckle so the Ankle Cuff is secure.

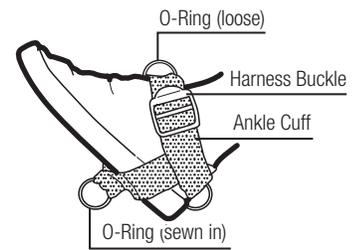

5. A. Position yourself on the Glideboard correctly for the specific exercise you want to perform.

- B. While sitting down on the Glideboard, bring 1 knee up, connect the Clip on the end of the rope to an O-Ring on the Ankle Cuff attached to your foot. Depending on the exercise you are performing, connect the Clip to the proper O-Ring.

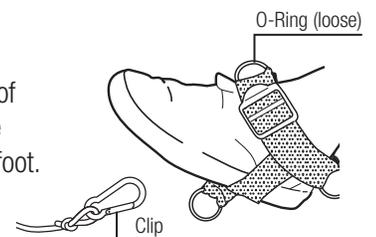

Be sure to always stabilize the Glideboard when clipping on or off the Ankle Cuff. Also, use caution when getting on or off the Glideboard. You are now ready to exercise using the Leg Pull Accessory. See your *Exercise Guide* for specific exercises that utilize the Leg Pull Accessory.

NOTE: Remove Leg Pulley Bracket when you are not exercising with it.

- B. To disconnect the Ankle Cuff, unclip the Rope from the O-Ring on the Ankle Cuff. Be sure to stabilize Glideboard when disconnecting Ankle Cuff.

REMOVE ALL ACCESSORIES WHEN YOU ARE NOT EXERCISING WITH THEM.

Starting Out

GENERAL SAFETY TIPS

- While performing exercises with quick tempo repetitions, the Total Gym® may move. Please be aware of the action and make necessary adjustments as you continue your exercise program.
- Wear athletic shoes and comfortable light clothing when exercising on the Total Gym®.
- Do not exercise barefoot.
- Check your exerciser before using to ensure that all the parts are in place and working properly (*see pages 11 and 12 for details on Inspection, Maintenance & Storage*).
- **Adult supervision is required at all times.**
- **The rails and glideboard can be raised to any desired level on the height adjustment column depending upon your degree of fitness. Please note, however, that the rails cannot be raised to the highest position on the height adjustment column when the leg pulley bracket is attached to the column.**
- Be sure you have plenty of free space – **at least 2-3 feet of clearance around the exerciser** – so that performing on the Total Gym®, as well as getting on and off, is convenient and safe.
- Each time you raise or lower the height adjustment column, be sure you hold it to keep it from dropping to the floor.
- Keep longer hair up for safety and to prevent interference with your exercise routine.

AS EASY AS 1-2-3

Begin using the product at a low incline. As your fitness level progresses, increase the incline to increase the intensity and improve your muscle strength. Don't be in a hurry to exercise at a high intensity level; start out easily and build gradually. The Total Gym® is as easy as 1-2-3 to use, so read on...

1. IMPORTANT THINGS TO REMEMBER WHEN USING THE TOTAL GYM®

- Always have control of the glideboard before getting on and off the exerciser.
- Keep your feet on the floor when getting on and off the exerciser. Only remove them from the floor for the duration of the exercise.
- If you are using the handles, hold onto them as you get on and off the glideboard.
- Remove cable from glideboard when not using cable handles.

2. EXERCISING WITH THE HANDLES ONLY

Grasp the handles which are attached to the cable and slide the glideboard to a position in which you can comfortably sit or lay down when performing the desired exercise (*see the Exercise Guide*). Be sure to keep your feet on the floor until you are in the correct position for the specific exercise. Then, if the exercise calls for your feet to be off the floor, place your feet as specified in the instructions.

3. EXERCISING WITH THE PRESS UP / PULL UP BARS

Slide the glideboard to a position in which you can comfortably sit or lay down on when performing the desired exercise (*see the Exercise Guide*). Keep your feet on the ground until you are in the correct position and feel comfortable. Then, place your feet in the proper position and begin to exercise.

When starting your exercise program, begin with the basic exercises in the *Exercise Guide* included with your Total Gym® to familiarize yourself with the movements. Use the lowest incline level to start with - you can work up to a higher incline level in the weeks and months to come.

For the specific Total Gym® exercises and programs, study and follow the instructions in the *Exercise Guide* included with your product.

Inspection, Maintenance & Storage

INSPECT YOUR TOTAL GYM® PRIOR TO EACH USE

Before using your Total Gym® for your workout session, be sure to make the following inspection:

- Make sure the equipment is fully opened and sitting on a solid, level surface with plenty of clearance on all sides. Unit should be used on a mat or on carpeted surfaces only.
- Make sure all the hitch pins are securely in place and locked into position.
- Check that the pulley is attached securely to the Hook on the top underside of the glideboard.
- Check that the cables are traveling correctly in the groove of each Pulley.
- Make sure the cable is securely fastened to each handle.
- Check that accessories are installed correctly when in use.
- Make sure the glideboard is gliding smoothly along the frame.


ROUTINE MAINTENANCE

- Wipe down your Total Gym® on a regular basis using a clean cloth and alcohol or alcohol-based products like Windex® or 409®. Do not leave towels or workout clothing laying or hanging on the equipment.
- Periodically check the following parts for signs of fraying or other wear: the cable, pulleys, wheels, glideboard, accessories and frame. If the cable, pulleys, frame or wheels need replaced - do not use your unit, wait until the part is replaced. If any other part than the ones listed above needs to be replaced, do not use that part until it is replaced.
- Never use a lubricant such as WD-40® or ArmorAll® to lubricate or clean the unit. Use only 3-in-1® oil or machine oil to lubricate the axles of the wheel or pulley, not the roller surface.


TO STORE YOUR TOTAL GYM®

Follow these easy steps to store your exerciser properly:


1. First, remove all Accessories and Attachments.
2. Remove Safety Hitch C Pin and Safety Pin from Vertical Column.
3. Be sure the Cable Pulley is attached to the Hook on the underside of the glideboard for folding.
4. Position one hand on either side of Rail to hold it up before releasing the Height Adjustment Quick Release Pin. Pull Pin out and slowly lower the Rails to the ground until they rest on the Back Crossbar.
5. **A.** Release Spring Loaded Pin (on left side Rail) as shown.

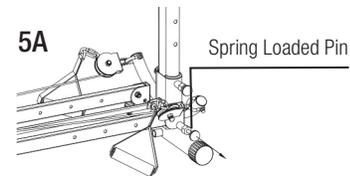

- B.** Fold Vertical Column down towards the center of the unit.

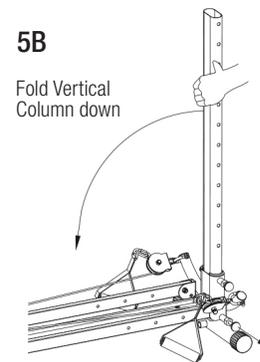


6. Slide the Glideboard towards the bottom of unit as shown.

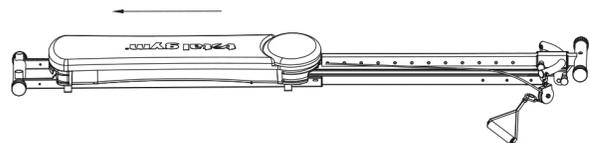

7. **A.** With caution, to avoid pinched fingers or hands, grab the top of the Glideboard and slowly pull the unit up allowing the Tube Rollers to bring the back of the unit towards the center. Keep approximately 12" apart.

B. Continue to fold the exerciser together until it is completely folded and roll the exerciser into a closet for storage. To store under a bed, simply lower the exerciser to the floor and roll under the bed.

WARNING LABEL 4

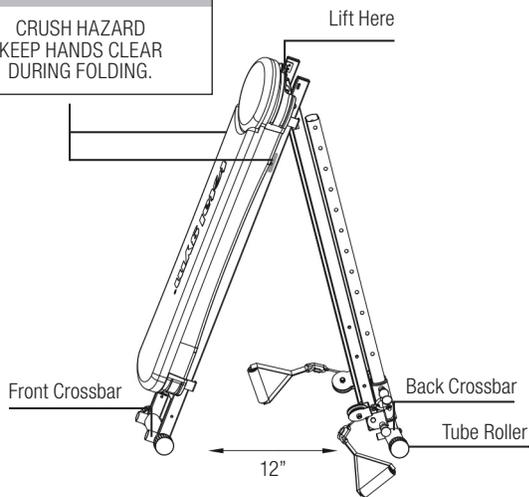


NOTE: Do not store unit in upright position when folded.

TO REMOVE THE GLIDEBOARD

You can also remove the Glideboard if you need to fit the exerciser under a narrow space (between 6" and 8").

IMPORTANT: The Glideboard weighs approximately 20 lbs. Use caution when lifting it off of the exerciser. Lifting incorrectly may result in user injury.

1. With exerciser laying flat on the floor, disconnect the Cable Pulley from the Hook on the underside of the Glideboard.
2. Next, tilt up the Glideboard and slide it off the frame of the exerciser. When the Glideboard is completely off the exerciser, set it aside.

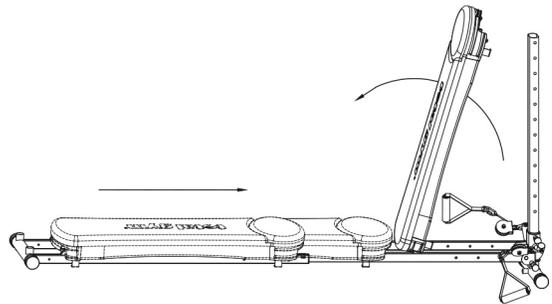


3. Next, pull the Spring Loaded Pin to release the Rail and fold the exerciser together as shown in Step 7 of TO STORE YOUR TOTAL GYM®. Be sure you release the Spring Loaded Pin before folding.

TO ATTACH THE GLIDEBOARD TO GYM WHEN SETUP AND READY FOR USE

1. Raise Rails to the highest level on the Vertical Column and insert Safety Pin.
2. Carefully pickup the Glideboard with both hands, one on each side, making sure the Hook on the underside of the Glideboard is at the top closest to the Vertical Column.
3. Line up the Glideboard with the lower Rails on your gym and gently lower the Glideboard down the Rails until it rests against the rubber stops.
4. Connect Cable Pulley to top underside of the Glideboard by taking the Pulley and sliding it onto the Hook that is on the underside of the Glideboard.

Total Gym® Elite Plus Parts List & Overview

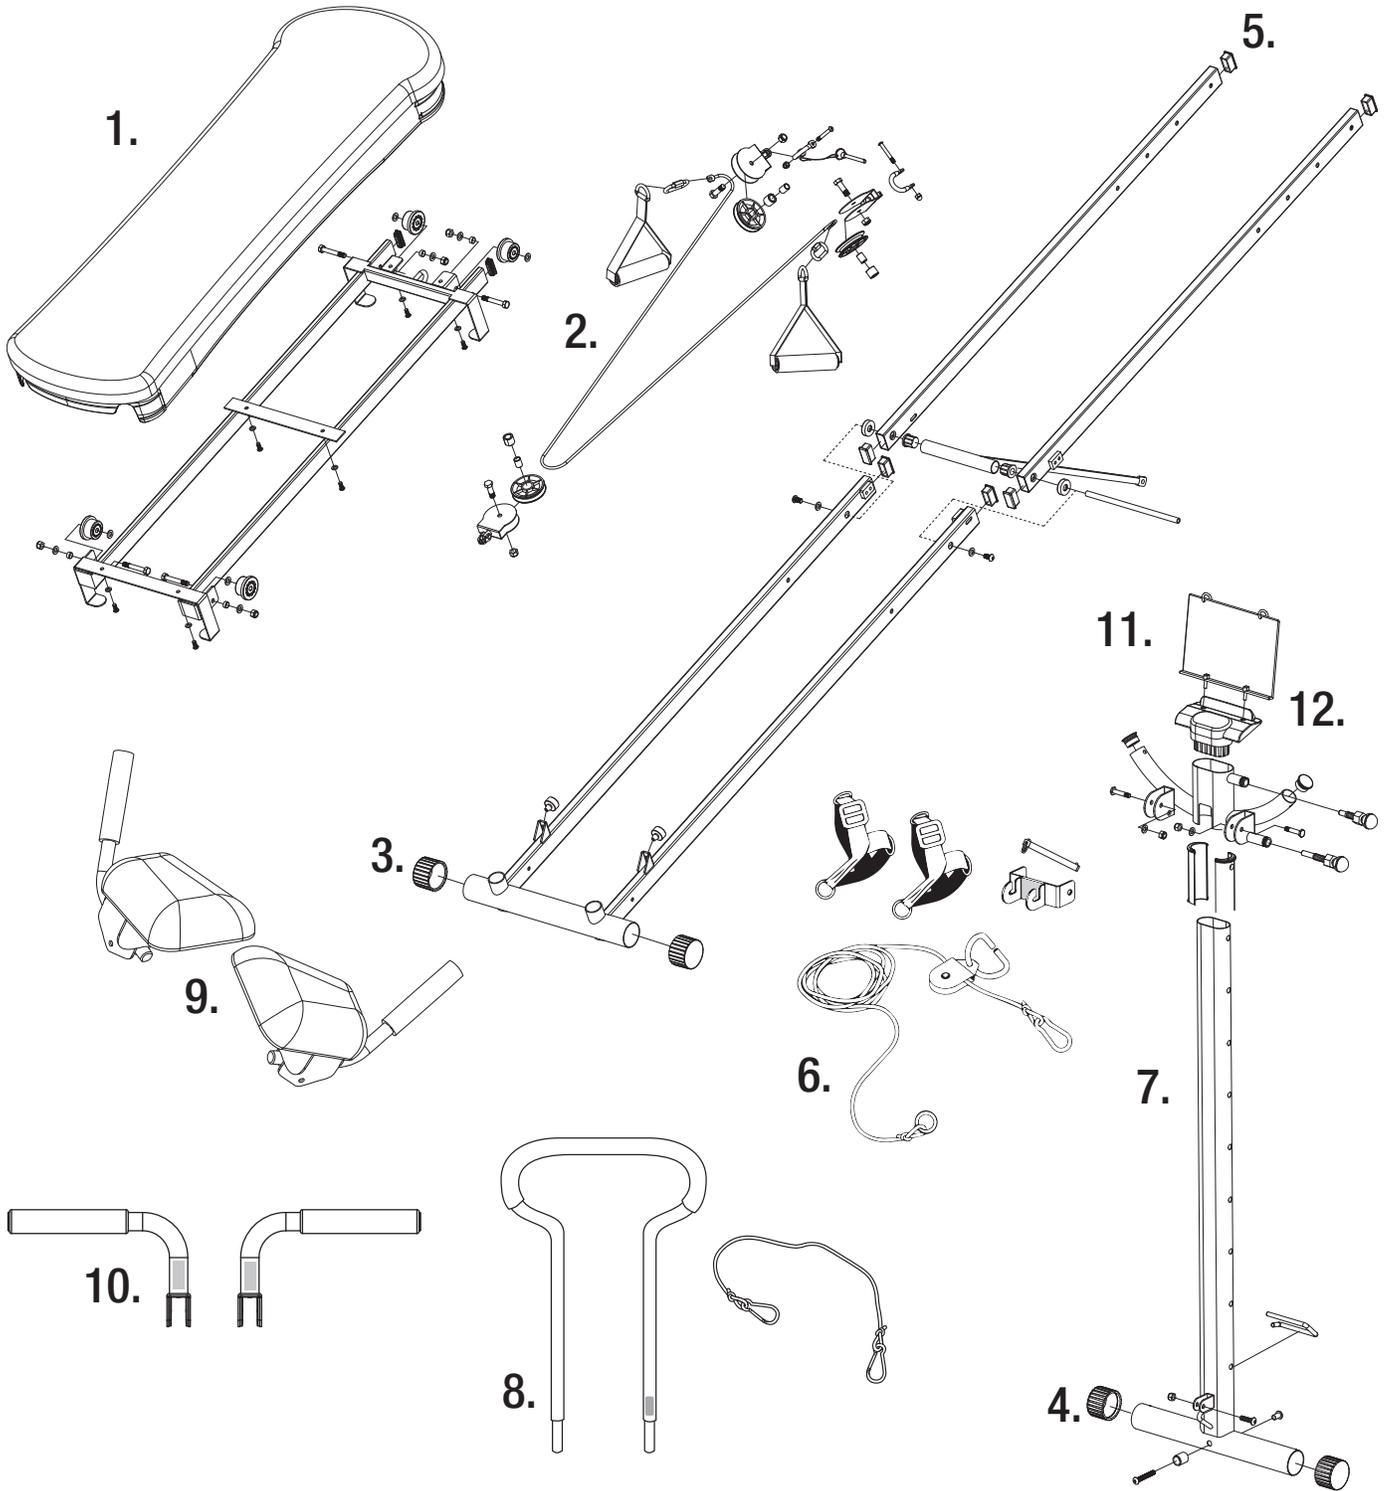

Total Gym® Elite Plus Parts List & Overview

ITEM #	DESCRIPTION	PART #	QTY	ITEM #	DESCRIPTION	PART #	QTY
1	Glideboard	RGBELP	1	8	Pilates Kit	RRPILS	1
	Wheel Kit (Set of 4)	RP102WK	1		Toe Bar	RS217H	1
2	Cable Kit	R40950	1		24-Inch Leg Extension Rope	PILS24	1
	Straight Safety Pin / Lanyard	RLANPIN	1	9	AbCrunch (Set of 2)	RABCH	1
	Handles (Set of 2)	RELPHAN	1	10	Press Up / Pull Up Bar (Set of 2)	RPPBH	1
3	Tube Cap	RR103EC	2	11	Flip Chart	RELPCF	1
4	Tube Roller	RR105TR	2	12	Flip Chart Base	RELPCFB	1
5	Rectangle End Cap	RR103RC	8	13	DVD		4
6	Leg Pulley System	RLPAR5	1		Todd Durkin Intermediate Program DVD	DVDTIS	1
	Ankle Cuff	R700035	2		Core Cable Flow Workout DVD	DVDCCF	1
	D-Ring	R100230	1		Pilates DVD	DVDPLS	1
	U Bracket	RRLPBHP	1		Start It Up! DVD	DVDSIS	1
	Hitch Pin	RRLHP	1				
	Pulley and Rope	PILS24P	1				
7	Height Adjustment System		1				
	Upright Cap	RELPUK	1				
	Adjustment Pin	RELPSK	1				
	Spring Loaded Pin	RR106SB	1				
	Safety Hitch C Pin	RR105CP	1				

DEDICATION TO QUALITY

We warrant this product to be free from all defects in material and workmanship when used according to the manufacturer's instructions.

Save your sales receipt. You may wish to staple into this manual.

TOTAL GYM FITNESS, LLC LIMITED WARRANTY

For a period of 24 months from date of receipt, Total Gym Fitness, LLC warrants that this product will be free from defects in materials and workmanship. This warranty applies only when purchase of the product is from an authorized dealer and is for personal or household use, but not when the sale or any resale is for commercial use. **THIS WARRANTY IS VALID ONLY FOR THE ORIGINAL OWNER AND IS NOT TRANSFERABLE.**

EXCEPT FOR THE LIMITED EXPRESS WARRANTY STATED HEREIN, TOTAL GYM FITNESS, LLC DISCLAIMS ALL OTHER EXPRESS OR IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Total Gym Fitness will not be liable for any loss or damage, including incidental or consequential damages of any kind, whether based on warranty, contract or negligence, and arising in connection with the sale, use or repair of the product.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY (INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. This warranty gives you specific legal rights and you may have other rights that vary from state to state. This warranty is valid in the U.S. and Canada only.

In the event of failure of this product to conform to this warranty during the warranty period, please contact our Customer Service Department at 1-800-303-7896. Customer Service will determine whether the defective part needs to be returned for repair or replacement. Any required product returns are at the owner's expense, unless otherwise approved by us in advance. Total Gym Fitness, LLC will repair or replace, at its own option, the product or any covered part, except that this warranty does not cover defects or damage caused by: accident (including in transit), repairs or attempted repairs by any person not authorized by Total Gym Fitness, LLC; vandalism, misuse, abuse or alteration; or the use of parts not manufactured or approved by Total Gym Fitness, LLC. This warranty does not cover any separately sold items, parts, or accessories. This warranty does not apply if product is used in a commercial, non-residential setting.

To register your product online, go to **totalgymdirect.com/warranty**.



© 2019 Total Gym Fitness, LLC. All rights reserved. Total Gym® is a registered trademark.
No part of this booklet may be reproduced in any form, by any means, electronic, mechanical or otherwise, without the express written consent of the copyright holder.
TGEPO1119V1

*Bring your workouts to the next level with optional attachments.
Learn more at TotalGymDirect.com*